

TROUBLE SHOOTING

PROBLEMS

TO BE CHECKED

The CLASSIC will not work:

Use the pool pulse to check the flow (see page 14).

If the flow rate is too low:

- Make sure the main sump valve is properly closed ;
- Make sure the filter and skimmer baskets are quite clean ;
- Check whether the hose and manual control valve are correctly connected
- Shut down the other suction lines to increase the flow into the appliance,
- Check the power of your pump: the minimum flow necessary is approximately 5m³/hour.

If the flow rate is correct:

- Check whether the diaphragm of the appliance is obstructed by debris or is damaged.

The CLASSIC moves very slowly and air bubbles appear in the flow:

- Check the system is tight: between the appliance and hose, between each of the hose sections, between the hose and the valve, between the valve and the skimmer.


The CLASSIC jams against the ladder or steps:

The problem is undoubtedly because the CLASSIC is not assembled in the way best suited to the shape and obstructions in your pool.

There are three possibilities open to you:

- You can fit the large deflector wheel instead of the small one (diagram 13)
- You can fit both the large and small deflector wheels, as for pools with right angled corners (see diagram 14)
- You can fit the large deflector wheel using the short hose (a) and the weir adapter (b), as in the diagram below (diagram 15).

If none of these three solutions resolve the problem, connect the hose to the vacuum point furthest from the steps, or shorten the hose to prevent it coming to rest on the steps.

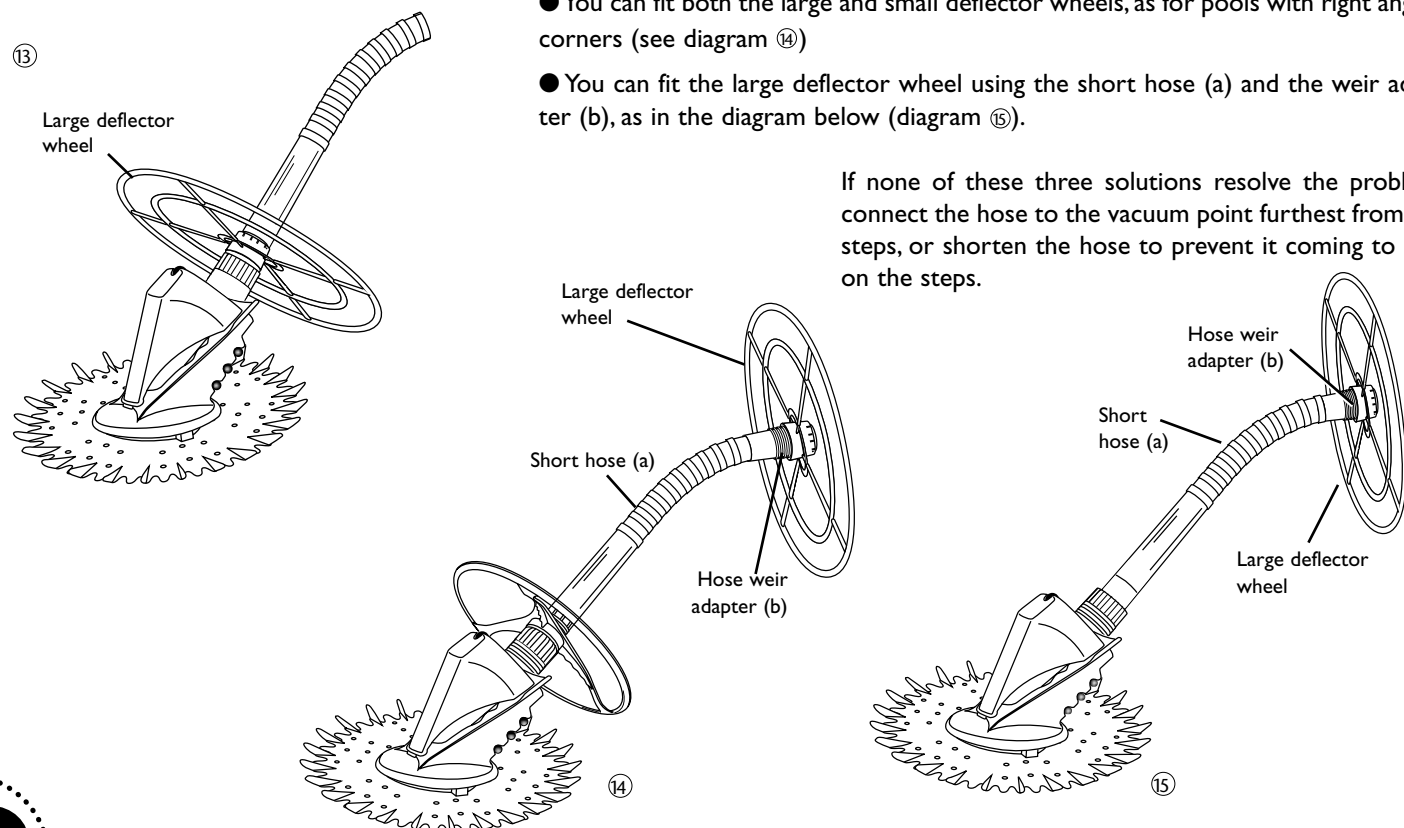

TROUBLE SHOOTING

PROBLEMS

TO BE CHECKED

The CLASSIC does not clean all parts of the pool:

- To ensure that the entire pool is cleaned the filtration system operating time can be reduced. For example, 6 hours filtration in 3 two hour sessions will give better coverage of the pool than a single 6 hour filtering session.
- Make sure your hose is long enough and add sections if necessary.
- Direct the inlet jets towards the bottom of the pool.
- Check the condition of the hose (see storage advice page 15).

The CLASSIC will not stay on the bottom of the pool:

- Make sure the hose weight is correctly installed on the hose 50 cm from the appliance (see diagram 6)
- Fit the large wheel instead of the small one (see page 14).

The CLASSIC jams on the main sump:

- Close the main sump.
- Check whether the main sump grill is properly fixed.

The CLASSIC does not mount the sides:

- The problem is undoubtedly because the CLASSIC is not assembled in the way best suited to the shape and obstructions in your pool. Assemble the CLASSIC as described in diagrams 13, 14 or 15 depending on the layout of your pool.

The CLASSIC is over the water line:

- Use the control valve or adjust the opening of the skimmers to regulate the flow of water passing through the appliance.

The CLASSIC lies down:

- If the appliance is unbalanced, the CLASSIC must be returned to the manufacturer for repair.

For further information, contact your retailer or write to us at :

ZODIAC POOL CARE EUROPE (UK)
Unit 2, Swinford Farm
Swinford Witney OX 29 4BL
ENGLAND

ZODIAC POOL CARE EUROPE
Z.I. Est - 34, rue Francine Fromont
69120 VAULX-EN-VELIN
FRANCE

<http://www.zodiac-poolcare.com>